
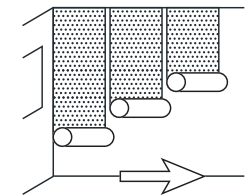
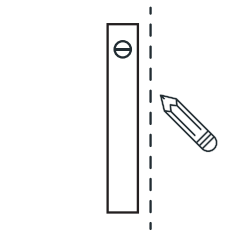


Instrukcja montażu tapet na klej serii PROWALL smooth · sand · canvas · concrete · raindrop

Tapeta winylowa na podłożu flizelinowym to materiał z delikatną strukturą, aplikowany na ścianę przy pomocy kleju. Pamiętaj, nigdy nie smaruj i nie nasączaj tapety, klej nakładaj równomiernie tylko na ścianę. Używaj wyłącznie dobrej jakości kleju do tapet flizelinowych ciężkich, polecamy korzystanie z gotowych produktów, dzięki czemu nie ryzykujemy uzyskania złych proporcji roztworu, jak przy produktach do przygotowania. Po montażu tapety pomieszczenie nie powinno być wietrzone przez ok 1-2 dni. Temperatura pomieszczenia od +18°C do +25°C, wilgotność ściany max 12%.

Przygotowanie ściany

Ściana musi być gładka, sucha, czysta i zagruntowana odpowiednim preparatem. Kolor ściany powinien być jednolity, bez silnie kontrastujących przestrzeni. Konieczne jest pozbycie się resztek starych farb, lakierów i tapet. Świeżo położone tynki lub świeżo pomalowane ściany pozostawić do wyschnięcia na około trzy tygodnie. Farby ceramiczne, lateksowe i wszelkie powierzchnie słabo przyczepne należy wcześniej zmatowić papierem ściernym. Aby uzyskać idealny efekt wypełnij wszystkie ubytki i zlikwiduj grudy. Pamiętaj o usunięciu wszystkich gniazd, listew przypodłogowych i innych elementów ze ściany - to ułatwi montaż. Nieodpowiednio przygotowana ściana może uniemożliwić montaż tapety.

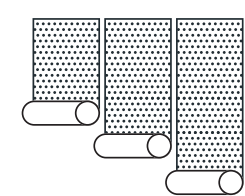

Rozwiń tapetę na czystej powierzchni i sprawdź czy otrzymałeś wszystkie bryty, a wzór jest zgodny z zamówieniem. Upewnij się, że każda część jest wolna od wad produkcyjnych, takich jak deformacje, odbarwienia lub różnice wymiarowe większe niż 1%. Wszystkie elementy powinny być jednolicie nasyczone, a motyw powinien do siebie pasować, niestety nie da się wyeliminować w 100% efektu przesunięcia grafiki. Nie odpowiadamy za wadliwą tapetę, która została zamontowana. W przypadku zakupu standardowych wymiarów Twoje bryty powinny być identyczne. Zamówienia niestandardowe numerowane są w kolejności klejenia od lewej do prawej strony.

Zmierz szerokość pierwszego brytu, weź ołówek i używając poziomicy zaznacz na ścianie pionową, drobną linię przerywaną w odległości odpowiadającej szerokości brytu. To miejsce będzie wyznaczało pion i miejsce łączenia pierwszego brytu z drugim. Wszystkie kolejne panele dopasowujesz do poprzedniego.

Za pomocą wałka posmaruj klejem odrobinę większy kawałek ściany niż panel, który będziesz montował. UWAGA tapety flizelinowej nie smarujemy klejem, ani nie moczymy w wodzie! Suchą tapetę przyłóż do ściany i dociskaj ją wałkiem lub rakłą do tapet. Niezależnie od wybranego sprzętu należy to robić uważnie, by nie zniszczyć materiału. Staraj się nie dopuścić do zabrudzenia tapety klejem, ale jeżeli pojawi się nadmiar kleju na krawędziach, ścieraj go na bieżąco miękką wilgotną gąbką lub ściereczką. Jeśli pojawi się nadmiar tapety na górze lub na dole - odetnij go nożykiem do tapet, dociskając krawędź tapety tak, by nie oberwać jej przy odcinaniu.




Instrukcja montażu tapety samoprzylepnej WALLSTICK

Wallstick to nie materiał - to prawdziwa rewolucja. Samoprzylepna tapeta to tkanina najwyższej jakości umożliwiająca wielokrotne użycie oraz szybki montaż. Nie wymaga używania żadnego kleju. Nie pozostawia zabrudzeń na ścianach i co najważniejsze – możesz z łatwością w każdej chwili odkleić i użyć ją ponownie.

Przygotowanie ściany

Ściana musi być gładka, sucha, czysta i zagruntowana odpowiednim preparatem. Kolor ściany powinien być jednolity, bez silnie kontrastujących przestrzeni. Konieczne jest pozbycie się resztek starych farb, lakierów i tapet. Świeżo położone tynki, świeżo zagruntowane lub pomalowane ściany należy pozostawić do całkowitego wyschnięcia na około trzy tygodnie. Aby uzyskać idealny efekt wypełnij wszystkie ubytki i zlikwiduj grudy. Pamiętaj o usunięciu wszystkich gniazd, listew przypodłogowych i innych elementów ze ściany - to ułatwi montaż. Nieodpowiednio przygotowana ściana może spowodować odpadanie tapety.

UWAGA! Tapety Wallstick nie należy naklejać na farby ceramiczne, lateksowe, plamoodporne, zmywalne i wszelkie powierzchnie słabo przyczepne. Temperatura pomieszczenia od +18°C do +25°C, wilgotność ściany max 12%.

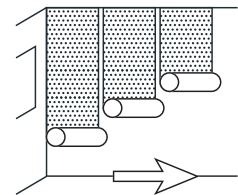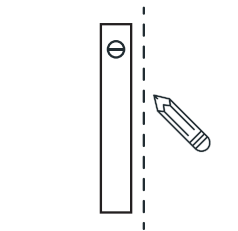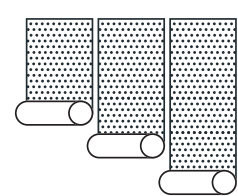

Rozwiń tapetę na czystej powierzchni i sprawdź czy otrzymałeś wszystkie bryty, a wzór jest zgodny z zamówieniem. Upewnij się, że każda część jest wolna od wad produkcyjnych, takich jak deformacje, odbarwienia lub różnice wymiarowe większe niż 1%. Wszystkie elementy powinny być jednolicie nasyczone, a motyw powinien do siebie pasować, niestety nie da się wyeliminować w 100% efektu przesunięcia grafiki. Nie odpowiadamy za wadliwą tapetę, która została zamontowana. W przypadku zakupu standardowych wymiarów Twoje bryty powinny być identyczne. Zamówienia niestandardowe numerowane są w kolejności klejenia od lewej do prawej strony. Prosimy uważać, tapeta po sklejeniu sama do siebie może zostać łatwo uszkodzona.

Zmierz szerokość pierwszego brytu, weź ołówek i używając poziomicy zaznacz na ścianie pionową, drobną linię przerywaną w odległości odpowiadającej szerokości brytu. To miejsce będzie wyznaczało pion i miejsce łączenia pierwszego brytu z drugim. Wszystkie kolejne panele dopasowujesz do poprzedniego.

Delikatnie odklej tapetę od podkładu i przymierz w zaznaczonym miejscu. Używając dołączonej rakli zacznij powoli przyklejać tapetę do ściany, a po każdym odcinku ściągnij kolejny kawałek papieru podkładowego odsłaniając przy tym warstwę klejącą. Raklowanie należy robić uważnie, by nie zniszczyć materiału, jeżeli po drodze pojawiają się pęcherze powietrza, odklej delikatnie tapetę i spróbuj ponownie. Jeśli pojawi się nadmiar tapety na górze lub na dole - odetnij go nożykiem do tapet, dociskając krawędź tapety tak, by nie oberwać jej przy odcinaniu.



Instrukcja montażu tapety

Wallpaper installation manual

i

Jeśli Twoja tapeta została przygotowana na niestandardowy wymiar, to powiększyliśmy ją z każdej strony o 2cm, aby zapewnić pełne krycie każdej krawędzi. Jeżeli tapeta jest podzielona na kilka ścian, zwróć szczególną uwagę na to, że posiada z prawej i lewej strony zakładkę 2cm, która umożliwia swobodne manewrowanie podczas montażu. Należy wziąć to pod uwagę przy rozpoczęciu prac, wzór trzeba przesunąć tak, aby końcowe łączenie znalazło się w narożniku.

If your wall is custom sized, then we did 2cm (approx. 1") excess on each side to be sure it will cover the whole wall on every edge. When you are doing multiple walls, then pay special attention to the fact that it has 2cm (approx. 1") overlap both left and right side, which allows you to maneuver during installation. You need to consider that while installing and make sure that your wallpaper will be connected in the corner properly.



Zeskanuj kod i obejrzyj instrukcje
Scan the code and watch tutorials


Installation instructions vinyl wallpaper **PROWALL**

smooth · sand · canvas · concrete · raindrop


Vinyl wallpaper on the fleece layer is applied to the wall with additional glue. Never apply glue directly on wallpaper or soak it in water! Place adhesive directly on the wall and mount dry wallpaper on top of it. Use only a good quality wallpaper glue, we recommend the use of ready-made products in the buckets, so you do not risk getting the wrong proportions of the glue which may happen with preparation products. After installing the wallpaper, the room should not be aired for about 1-2 days. Room temperature should be from + 18°C to + 25°C, maximum wall humidity 12%.

Wall preparation


The wall must be clean, dry, smooth and primed with a suitable product. Color should be neutral and uniform with no contrasting areas. It is necessary to get rid of all the remains of old paints, varnishes and wallpapers before mounting. Freshly painted walls and new plasters should be left to dry completely for about 3 weeks. Teflon, latex or other uncertain kinds of paints which can decrease adhesive power should be grinded with sandpaper and then primed as instructed above. To achieve the perfect effect, fill in defects and get rid of all bumps. Remember to remove every socket, skirting board and any other element from the wall - it will make your mounting quicker and easier. If your wall is not prepared properly it will prevent the correct mounting of new wallpaper.

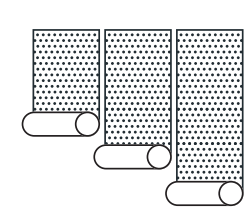

Roll out your wallpaper on a clean surface. Check if you have received all the pieces and the pattern is the one you ordered. Make sure that each part is free of production defects, such as deformations, discolorations or size differences higher than 1%. Every panel should be uniformly saturated and the motives should fit together. Unfortunately, you can not completely eliminate graphic shift effect. We are not responsible for defected wallpaper hanged without checking it first. If you purchase standard sizes, your panels should be the same. Custom orders are numbered in the order from left to right.

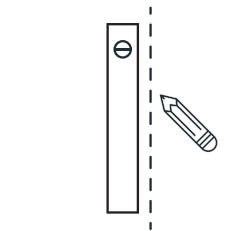

Measure the width of the first panel. Take a pencil and using a spirit level mark a vertical, fine dashed line on the wall at a distance corresponding to the width of the panel. This line will be the place of first and second panel link and also it marks the vertical direction. Next panels are matched to the previous one side to side.

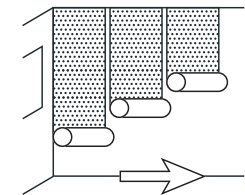

Use a roller to apply glue on a slightly larger surface of the wall than the panel you will be assembling. PLEASE NOTE you never apply glue directly on wallpaper and never soak it in water! Apply the dry wallpaper to the wall and press it down with a paint roller or a wallpaper squeegee. Regardless of the equipment chosen, it should be done carefully so as not to destroy the material. Try to keep the wallpaper clean, but if you see any excess of glue, immediately rub it with a soft, damp sponge or cloth. If there is an excess of a wallpaper at the top or bottom - cut it with a wallpaper knife, pressing the edge of the wallpaper to prevent any damage.


Installation instructions self-adhesive wallpaper **WALLSTICK**

Wallstick is not a usual material - it's a pure revolution. Self-adhesive, high-quality wallpaper made from fabric which allows multiple usage and a quick assembly. No need for additional glue. What's best about it?- you can easily peel it off at any time and use it again.


Wall preparation

The wall must be clean, dry, smooth and primed with a suitable product. Color should be neutral and uniform with no contrasting areas. It is necessary to get rid of all the remains of old paints, varnishes and wallpapers before mounting. Freshly painted walls and new plasters should be left to dry completely for about 3 weeks. To achieve the perfect effect, fill in defects and get rid of all bumps. Remember to remove every socket, skirting board and any other element from the wall - it will make your mounting quicker and easier. If your wall is not prepared properly it will prevent the correct mounting of new wallpaper.


WARNING! Please be aware that self-adhesive cannot be mounted on latex, teflon or other stain-resistant paints. Room temperature should be from + 18°C to + 25°C, maximum wall humidity 12%.

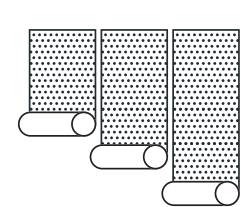

Roll out your wallpaper on a clean surface. Check if you have received all the pieces and the pattern is the one you ordered. Make sure that each part is free of production defects, such as deformations, discolorations or size differences higher than 1%. Every panel should be uniformly saturated and the motives should fit together. Unfortunately, you can not completely eliminate graphic shift effect. We are not responsible for defected wallpaper hanged without checking it first. If you purchase standard sizes, your panels should be the same. Custom orders are numbered in the order from left to right. Please be careful, the wallpaper after sticking to itself can be easily damaged.

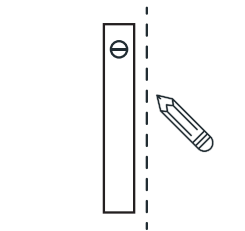

Measure the width of the first panel. Take a pencil and using a spirit level mark a vertical, fine dashed line on the wall at a distance corresponding to the width of the panel. This line will be the place of first and second panel link and also it marks the vertical direction. Next panels are matched to the previous one.

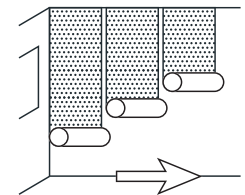

Gently peel off a small part of the wallpaper from the undercoat and stick it in the marked place. Using the included squeegee start to slowly stick the wallpaper to the wall and after each fragment is done pull another piece of undercoat revealing the adhesive layer. You should do it carefully. Make sure you do not destroy the material. In case of air bubbles appearing along the way, loosen the wallpaper gently and try again. If there is an excess of a wallpaper at the top or bottom - cut it with a wallpaper knife, pressing the edge of the wallpaper to avoid ripping it off.

BEST things for YOUR HOME

www.wallcolors.com

W			32-540		TRZEBINIA	
PRZEMYSŁOWA				8	POLAND	

100% recycled paper